

Air purifier

Floor standing or desktop type

MC30YBFVM3

Air Purifier OPERATION MANUAL





- · Thank you for purchasing this air purifier.
- Please read the operation manual carefully and follow it for correct use.
- Please read the "Safety Precautions" section before use. Page 3,4

 Please keep the operation manual in a safe place for later reference.





Features

Streamer Technology

<{


STREAM

This technology employs a "Streamer discharge", a type of plasma discharge comprising high-speed electrons with powerful oxidative capacity, that is generated inside the air purifier.

The discharge swiftly removes odours. (The high-speed electrons are generated and then adsorbed within the unit to ensure your safety.)

Streamer discharge decomposes adsorbed odour

Decomposition cycle that maintains deodorising capacity.

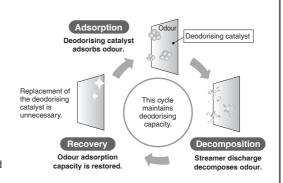

Streamer operation is dependent on time control.

During operation, the Streamer discharge may generate a hissing sound, however, this does not indicate a defect. In addition, the sound may lessen or change in tone depending on the operating duration, however, such changes are normal.

In some cases the air outlet may emit a slight odour as trace amounts of ozone are generated. However, the amount is negligible and is not harmful to your health.

Controlling PM2.5

These results were obtained in a 32m³ airtight space.

They are not demonstrable effects in customer environments.

Elimination of 99% of 0.1-2.5µm particles (*1)

- Does not take into account inflow of new particles from outdoors owing to ventilation etc.
- PM2.5 is a generic term for particulate matter that is 2.5µm or less in size.
- Elimination of particulate matter that is less than 0.1µm in size by this air purifier has not been verified.
 This product cannot eliminate all airborne toxic substances.
- (*1) Test methodology: The Japan Electrical Manufacturers' Association standard (JEM1467) Decision criteria: Elimination of 99% of 0.1-2.5µm particulate matter in a 32m³ airtight space in 90 minutes or less. Equivalent value for 32m³ test space.

Powerful and swift suction action driven by maximum airflow

Suction of house dust and odours with maximum airflow.

3 filter layer structure ensures thorough and rapid purification of the ambient air.

Substances that can be controlled/broken down



Allergens such as dust mite droppings and remains



Odours



Formaldehyde



Diesel particulate matter



NOx

Substances that can be trapped



Dust



Yellow sand

Contents

Read First		
8	Features	1 3 5 7
Operation 2	Using the Air Purifying Operation	9
Useful Functions	Operating the Unit in a MODE HAZE MODE Using the Child Proof Lock	11
Advanced Settings		12
Maintenance 3	Maintenance Separately Sold Part / When Not Using the Unit for Long Time Periods	
Troubleshooting	About the Indicator Lamps	18

Safety Precautions

■ Observe these precautions in order to prevent property damage or injury.

■The consequences of incorrect use are categorised as follows:

⚠ WARNING	⚠ CAUTION
Failure to follow these instructions promay result in personal injury or loss of	perly life. Failure to follow these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

■ Precautions to be observed are categorised using symbols:



/!\ WARNING Observe in order to prevent fire, electric shocks or severe injury.


■ Concerning the power supply plug and cord

- Do not unplug while the unit is in operation. (Fire or an electric shock may result from heating)
 - Do not plug or unplug with wet hands. (An electric shock may result)
 - Do not use in such a way that the ratings of the power socket or wiring appliances are exceeded or use a voltage outside of the range AC220-240V. (Fire may result from heating if the ratings of multi-socket power adapters, etc., are exceeded)
 - Do not pull on the power supply cord when unplugging. (Heating or fire may result from wire breakage)
 - · Do not subject to acts that might damage them.
 - -Such acts include damaging, modifying, forcibly bending, pulling, twisting, bundling up, placing heavy objects on, etc., the power supply plug or cord. If the power supply plug or cord is damaged, it must be replaced by the manufacturer, its service agent, or a similar qualified person in order to avoid a hazard. (An electric shock, short circuiting, or fire may result from use while damaged)



- Insert the power supply plug firmly all the way in.
 - -Do not use a damaged power supply plug or a loosely fitted power socket. (An electric shock or fire, due to heating or short circuiting, may result if the power supply plug is not firmly inserted)
- · Periodically wipe dust off the power supply plug with a dry cloth.
 - -If the unit is not to be used for an extended period of time, unplug the power supply plug. (Fire or overheating may be caused by defective insulation resulting from moisture etc.)
- · When performing maintenance, inspecting, or moving the unit, make sure to turn off and unplug the appliance. (An electric shock or injury could result)

■ Do not use in the following places

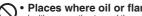

- Places where oil or flammable gases are used or may leak. (Fire or smoke may result from ignition or suction toward the unit, or injury may result from degradation or cracking of plastic)
- Places where there is corrosive gas or metal dust particles. (Fire or smoke may result from ignition or suction toward the unit)
- Places where temperature and humidity levels are high or water may scatter, such as a bathroom. (Fire or an electric shock may result from electrical leakage)
- Places accessible to small children. (An electric shock or injury may result)

■ During use



- Do not use chlorinated or acidic detergents. (Injury may result from the degradation or cracking of plastic, or harm may be caused to health from the production of toxic gases)
- Keep burning cigarettes or incense sticks away from the unit. (Fire or smoke may result from ignition or suction toward the unit)
- Do not attempt to disassemble, reconstruct or repair the unit yourself. (Fire, an electric shock, or injury may result) For repairs, please contact the place of purchase.
- . Do not insert fingers, sticks, or any other item, into the air inlets or air outlet. (An electric shock, injury, or damage may result)
- Do not pour water on to the air outlet or the unit. (Fire or an electric shock may result)
- Do not use flammable substances (hair spray, insecticide, etc.) near the unit.
- Do not wipe the unit with benzine or thinner. (An electric shock, fire, or cracking may result)

MARNING Observe in order to prevent fire, electric shocks or severe injury.

■Immediately turn off and unplug the unit if there are any signs of abnormality or damage

Examples of abnormality or damage

- The unit does not operate even if the switch is turned on.
- Current passes through the cord only sometimes if the cord is moved.
- There are abnormal sounds or vibrations during operation.
- The casing of the unit has deformed or is abnormally hot.
- There is a burnt smell. (Malfunctioning, an electric shock, smoke, fire, etc., may result if the abnormality is not addressed and the unit continues to be used)

Contact the place of purchase.



CAUTION Observe in order to prevent short circuiting, injury or property damage.

■ During use



· Small children or immobile persons (due to illness or injury) should not operate the unit by themselves.

◆ For FU:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

◆For other than EU:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Persons who are heavily intoxicated or have taken sleep medication should not operate the unit. (An electric shock, injury or poor health may result)
- Do not use products, such as cosmetics, that contain fine powder, near the unit. (An electric shock or malfunctioning may result)
- Do not operate the unit when fumigating insecticide is in use.
 - After using insecticide, make sure to sufficiently ventilate the room before operating the unit. (Harm may be caused to health from an outflow of accumulated chemical compounds from the outlet)
- · Do not use near a smoke detector.
 - If out flowing air flows in the direction of a smoke detector, the response of the smoke detector may be delayed or it may fail to detect smoke.



- · Frequently ventilate the room when using the unit together with combustion-based heating devices.
 - Usage of this product is not a substitute for ventilation. (Potential cause of carbon monoxide poisoning)
 - This product cannot eliminate carbon monoxide.
- If the unit is placed within reach of a pet, be careful that the pet does not urinate on the unit or chew on the power supply cord. (Fire, an electric shock, or injury may result)

■Concerning the unit body



- Do not obstruct the air inlets or air outlet with laundry, cloth, curtains, etc. (Overheating or fire may result from poor circulation)
- Do not climb, sit or lean on the unit, (Injury may result from falling or toppling)

■When moving the unit




When picking up the unit to move it, handle the unit with caution.


- Make sure to always hold the unit using the correct grips. Do not hold the unit using the grip on the deodorising filter unit. (Injury may result from falling)

Names of Parts and Operations

⚠ CAUTION -


Do not lift up the unit holding the grip on the deodorising filter unit. (May lead to falling over)

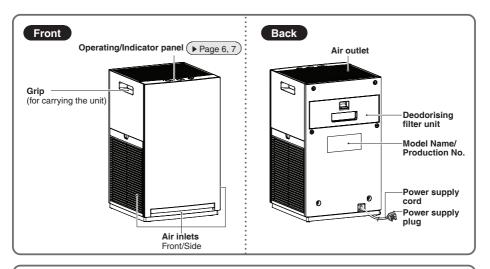

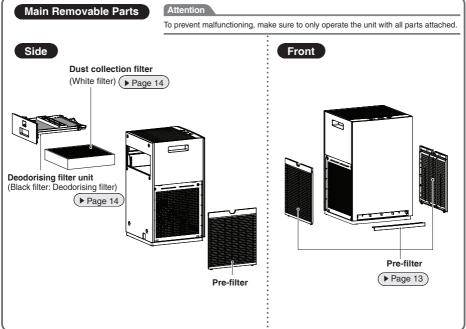

Operating/Indicator panel

When a lamp is blinking (▶Page 16)

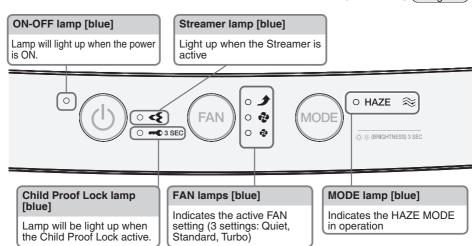


About the Child Proof Lock lamp

 When Child Proof Lock is activated, operations will be restricted. When any button is pressed, a tone (3 short beeps) will sound, preventing misoperation by small children. Page 11


2 About the Streamer lamp

- The lamp lights up when the Streamer is operating. The Streamer operation is time controlled.
- If the hissing sound generated by the Streamer discharge or the smell of ozone bothers you, set Streamer output to low. Page 12)

Names of Parts and Operations

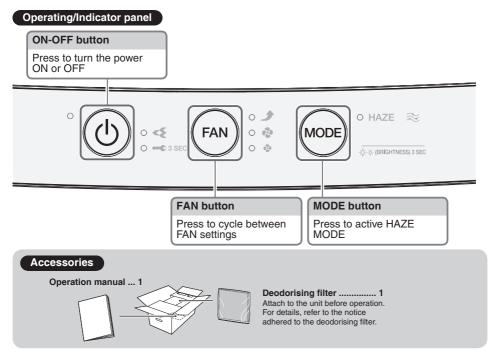

Preparation Before Operation

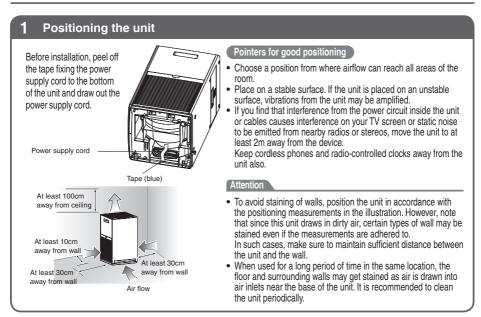

Preparation Before Operation

Do not use in the following places


- Do not expose to direct sunlight (Discolouration may result)
- Do not position near combustion-based heating and other high temperature devices (Discolouration or deformation may result)
- Do not expose to places where chemicals and pharmaceuticals are used such as hospitals, factories, laboratories, beauty salons, and photographic laboratories
 - (Volatilised chemicals and solvents may degrade mechanical parts and lead to malfunction)
- Do not expose to high levels of electromagnetic waves such as near an electromagnetic cooker, speakers, etc.

The unit may not function correctly.

■ Do not expose to soot (conductive dust) released by candles, aromatic candles, etc.
The performance of the filters may be impaired, causing the room to become dirty due to the build-up of dust that is not captured.

- Do not use cosmetics etc., containing silicone* near the unit.
 - * Hair care products (split ends coating agents, hair mousse, hair treatment agents etc.), cosmetics, antiperspirants, antistatic agents, waterproof sprays, lustering agents, glass cleaners, chemical wiping cloths, wax, etc.
 - If an insulator such as silicone adheres to the needle of the Streamer unit, the Streamer discharge may not be generated.
 - The dust collection filter may become clogged up resulting in reduced air purifying capacity.
- Do not use an ultrasonic humidifier or similar appliance near the unit.

The dust collection filter may become clogged up resulting in reduced air purifying capacity.

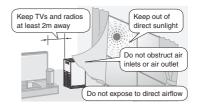


About Streamer discharge

In some cases the air outlet may emit a slight odour as trace amounts of ozone are generated. However, the amount is negligible and is not harmful to your health.

This product cannot eliminate the toxic substances in tobacco smoke (carbon monoxide etc.)

2 Attaching the deodorising filter

- For the attachment method, refer to the notice adhered to the deodorising filter.
- 3 Insert the power supply plug into the socket
- . Insert the power supply plug to ON the unit.

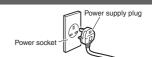

Operation



Do not turn off the unit by unplugging it from the power socket. (Fire or an electric shock may result from heating)

0



o **∢**€







O HAZE ≋

(BRIGHTNESS) 3 SEC

Using the Air Purifying Operation (turning operation ON/OFF)

Cleans the air in the room.

Press (1)

- ON-OFF lamp [blue] lights up.
- Press again to turn OFF.



Attention

• Do not move the unit, or attach or remove parts to/from the unit while it is in operation. Breakage or malfunctioning may result.

Note

- At the time of purchase, the unit is set to Turbo fan.
- When the unit is unplugged or turned OFF, it will operate with the settings last used the next time it is turned ON.
- Operation settings cannot be changed for about 2 seconds immediately after the power supply plug is inserted.

Changing the Airflow Rate

Select the desired FAN setting.



Press (FAN)

Each press cycles between the FAN lamps [blue].



About FAN settings

Quiet

A gentle breeze is emitted. Recommended for use during sleep hours. To quickly eliminate odours from a room, it is recommended that the FAN be set to Standard or above, otherwise, deodorising capacity is reduced.

The ambient air is quickly purified using maximum airflow. Recommended for use whilst you are cleaning up a room.

Useful Functions



Operating the Unit in a MODE

Select the MODE according to your needs. Airflow is adjusted automatically when the unit is running HAZE MODE.

Press (MODE)

• Each press will activate and deactivate HAZE MODE [blue].

o haze ≈

MODE	Usage and Function
HAZE MODE	Remove the fine particles (PM2.5) quickly and decompose harmful substances.
	Airflow will begin to operate at Turbo fan speed for 90 min with Streamer discharge. Then the airflow change to Standard fan speed with Streamer discharge until the termination of function.

Note

- Press (FAN) will terminate HAZE MODE.
- When the HAZE MODE is terminated, it will switch back to the previous fan speed.

Useful Functions



Using the Child Proof Lock

Button operation is restricted, preventing misoperation by small children.

Hold down (b) for about 3 seconds.

- Hold down (b) for about 3 seconds again to turn off Child Proof Lock.
- When Child Proof Lock is active, operations will be restricted. When any button is pressed, a tone (3 short beeps) will sound, preventing misoperation by small children.

Note

- If the unit is unplugged when Child Proof Lock is active, Child Proof Lock will turned off.
- The Child Proof Lock lamp [blue] lights up when the function is active.

Adjusting Indicator Lamp Brightness

Indicator lamp brightness is adjustable.

Hold down (MODE) for about 3 seconds.

• Hold down (MODE) for about 3 seconds again to cycle between settings.



Note

- This function is useful if the lamps bothers you during sleep hours etc.
- The ON-OFF lamp does not turn off even if the brightness is set to OFF.
 This lamp will be set to DIM.
- If the (FAN) or (MODE) is pressed when brightness is set to OFF, brightness will change to DIM and return to OFF after about 10 seconds.

Advanced Settings



If the hissing sound generated by the Streamer discharge or the smell of ozone bothers you

*Setting at time of purchase

Streamer Output Settings

Regular* Low

Hold down (1) and (MODE) for about 3 seconds with the power supply plug inserted and the unit turned off.

• Each time (1) and (MODE) are held down for about 3 seconds, the setting switches between Regular and Low.

[When the setting is changed to Low]

A short beep sound and the Streamer lamp blinks for about 5 seconds.

Blinking

[When the setting is changed to Regular]
A short beep sound and the Streamer lamp lights up for about 5 seconds.



■Operation status of Streamer

Streamer output setting FAN setting		Regular	Low
FAN	Quiet, Low	ON-OFF**	OFF
	Standard	ON-OFF	ON-OFF**
	Turbo	ON	ON

**The Streamer operation status ON-OFF means that the Streamer turns ON and OFF depending on the time control.

Note

- It is recommended that the Streamer be set to Regular as deodorising capacity is reduced when set to Low.
- Settings are remembered even if the unit is unplugged.

- ⚠ WARNING -

Before cleaning and maintenance work, make sure to unplug the unit. (An electric shock or injury may result)

Maintenance

Outflow grille

Cleaning the air outlet (When dirt becomes and issue)

Clean the air outlet with a soft brush.

- * Exercise caution not to have dust fall inside the air purifier.
- ★ If covered in dust, wipe up dust with a soft damp cloth.
- Do not use a hard brush etc. (Breakage may result)



Unit

When dirt becomes an issue

Wipe

- · Wipe up dirt with a soft damp cloth.
- When dirt buildup is severe, wet a cloth with kitchenuse neutral detergent and wipe up the dirt.
- Do not use a hard brush etc. (Damage may result)

Pre-filter (Front/Left-side/Right-side)

About every 2 weeks Vacuum clean Wash/Rinse


- After removing any dust using a vacuum cleaner, remove and wash the filter with water and then leave it in shade to dry off.
- Use a soft brush when cleaning the spaces in the grid.

Attention

- Do not use a cotton bud or hard brush etc. (Partial breakage of the filter may result)
- Do not apply heavy force. (Partial breakage/damage of the filter may result)
- When dirt buildup is severe, leave the part soaking in lukewarm or room temperature water mixed with kitchen-use neutral detergent, thoroughly rinse off the detergent and leave the part in shade to dry off.



Attaching

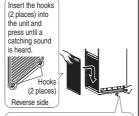


Insert the hook (1 place) into the unit. Push both ends




Caution:

attached.

For removing the pre-filter (front), use 3 fingers to pull towards you to prevent unavoidable damage of filter mesh.

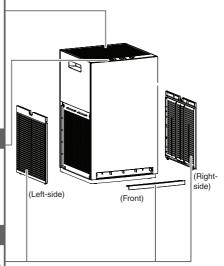

- Do not use petrol, benzine, thinner, polishing compound, paraffin, alcohol, etc. (An electric shock, fire, or cracking may result)
- Do not wash the main body of the unit with water. (An electric shock, fire, or malfunctioning/ breakage may result)

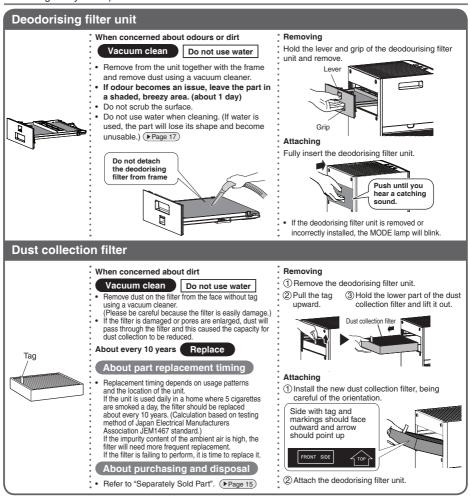

Attention

- Make sure that the dust collection filter and deodorising filter unit are attached to the unit when the unit is operating. If these parts are not attached when the unit is operated, breakage/malfunctioning may result.
- Follow the advice below to prevent discolouration or deformation.
 - If detergent was used, make sure to wipe it up thoroughly so none remains.
 - If hot water is used, make sure that it is 40°C or less.
 - Do not leave parts to dry in direct sunlight.
- Do not dry parts using a dryer.
 Do not apply fire to parts.
- If using a vacuum cleaner, make sure to not apply force to or knock the part. (Damage may result)

Separately Sold Part

Contact the place of purchase.

Replacement part

Dust collection filter (1 piece)

Model: BAFP500A



- Replace about every 10 years.
- Failure to clean parts properly could result in:
 - Reduced air purifying capacity.
 - · Reduced deodorising capacity.
 - Emission of odours.
- · Observe local waste separation rules when disposing of the dust collection filter (made of polyester and polypropylene).

When Not Using the Unit for Long Time Periods

- 1. Remove the power supply plug.
- 2. Clean the parts. Page 13, 14
 - In particular, components cleaned with water should be completely dry. (Mould may result from remaining moisture)
- 3. Cover the air outlet and other openings with a plastic bag or similar to prevent dust entry, and store the unit upright in a dry place.


(Malfunctioning/breakage may result from storing the unit upside down or on its side)

Before cleaning and maintenance work, make sure to unplug the unit. (An electric shock or injury may result)

About the Indicator Lamps

Operating/Indicator panel

Check the indicator lamps and respond as indicated below.

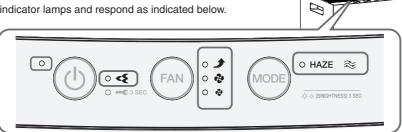

Indicator lamp		Cause/Solution		
MODE lamp is blinking.	This lamp blinks if the deodorising filter unit has been detached or is not attached properly. → Attach the deodorising filter unit properly. ▶ Page 14			
Streamer lamp is blinking.		It is time to replace the Streamer unit. → Contact the place to purchase.		
ON-OFF lamp is blinking.	An electrical compo → Contact the place			
	Are the pre-filters and dust collection filter attached?	■ If all parts are attached An electrical component is faulty. → Contact the place of purchase.		
	These lamps may blink if the unit is operated without a part attached.	■ If one or more components are not attached Remove the power supply plug, reattach the parts and then turn the unit on again.		
All 3 FAN lamps are blinking simultaneously	Is there a buildup	■ If there is no dust buildup An electrical component is faulty. → Contact the place of purchase.		
* *	of dust on the pre-filters?	■ If there is a dust buildup Remove the power supply plug, clean the pre-filter and then turn the unit on again. ▶Page 13		
** **	Is the air outlet blocked?	■ If the air outlet is not blocked An electrical component is faulty. → Contact the place of purchase.		
		■ If the air outlet is blocked Remove any obstacles blocking the air outlet and then turn the unit on again.		
	These lamps may b	llink if there is a sudden drop in voltage.		
	If none of the conditions above occurs, → Contact the place of purchase. It is recommended to unplug the unit until the service agent is arrive.			

FAQs

Please check the following before contacting us.

Q: Can the dust collection filter be cleaned?

A: If dirt buildup is severe, please clean with a vacuum cleaner or replace it.

Do not attempt to clean it with water, as this may result in reduced performance of dust collection filter. Page 14)



Q: The dust collection filter easily turns black...

A: The blackening does not affect dust collection performance. However, it can be replaced if it is an issue.

Q: Can the deodorising filter be cleaned with water? Or should it be replaced?

A: It cannot be cleaned with water.

(If water is used, the part will lose its shape and become unusable.)

If you have inadvertently washed it with water, consult the place of purchase.

Remove the deodorising filter unit from the main body and vacuum off dust with a vacuum cleaner.

It is not necessary to replace the filter.

If odour becomes an issue, leave the part in a shaded, breezy area. (about 1 day)

▶ Page 14)



Troubleshooting

■ Before making an inquiry or a request for repair, please check the following. If the problem persists, contact the place of purchase.

■In the event of malfunction during operation

If the indicator lamps light up abnormally, or become inoperable, due to a lightning strike etc., remove the power supply plug, wait at least 5 seconds then reinsert the power supply plug and turn the unit on again.



Not a problem

This case is not a problem.



Check

Please check again before requesting repairs.

■Unit does not respond

Phenomenon	Check points
No response even if (1) is pressed	To protect the system, the unit may stop operating after sudden large voltage fluctuations. If operating at the time, operation will resume automatically once voltage returns to normal. Voltage range protection: 198V-264V

■Sounds can be heard

Phenomenon	Check points
Hissing sound during operation	While the Streamer is operating, the Streamer unit will emit a hissing sound when conducting Streamer discharge. Depending on usage, the sound may fall in volume or change to a crackling, whirring, or guzzling sound. However, this is normal. If the sounds are an issue, try moving the unit to a different location. Page 12
Whistling and fluttering sound during operation	 Is there a buildup of dust on the pre-filters? → Clean this part.
Operating sound is loud	● Is the dust collection filter attached properly? → If it is not properly attached, operating sounds may become louder. ▶ Page 14

■Indicator lamps

Phenomenon	Check points
Indicator lamps do not light up	• Is indicator lamp brightness set to OFF? → If indicator lamp brightness is set to OFF, all lamps except
Indicator lamps turn off about 10 seconds after the unit is turned on	the ON-OFF lamp will remain off. → If indicator lamp brightness is set to OFF, after the unit is turned on, the brightness of the indicator lamps will be DIM for about 10 seconds and then turn OFF. ▶ Page 11

Troubleshooting

Phenomenon	Check points	
All the FAN lamps are blinking together.	 Are the pre-filters and dust collection filter attached? These lamps may blink if the unit is operated without a part attached. [If one or more parts are not attached] → Remove the power supply plug, reattach the parts and then turn the unit on again. [If all parts are attached] An electrical component is faulty. → Contact the place of purchase. • Is there a buildup of dust on the pre-filters? [If there is a dust buildup]	
	returns to normal. Voltage range protection: 198V – 264V. If none of the conditions above occurs, → Contact the place of purchase. It is recommended to unplug the unit until the service agent is arrive.	
Sometimes the Streamer lamp does not light up	The Streamer may stop operation depending on the time control. Streamer lamp turns off when the Streamer stop operating.	
The Streamer lamp blinks	● Streamer is recommended to be replaced. → Contact the place of purchase.	
The MODE lamp blinks	• Is the deodorising filter unit attached? → Attach the deodorising filter unit. ▶ Page 14	

Troubleshooting

■ Air purifying function

Bharamanan	Obsalansints
Phenomenon	Check points
Air purifying capacity is reduced	 Is the unit positioned in a place where airflow cannot reach or surrounded by obstacles? → Choose a position that is obstacle-free and from where airflow can reach all areas of the room. Is the pre-filters or dust collection filter dirty? → Clean these parts. Page 13, 14
The air outlet is emitting an odour	 Is the deodorising filter dirty? → Clean these parts. Page 14 In some cases the air outlet may emit a slight odour as trace amounts of ozone are generated. However, the amount is negligible and is not harmful to your health. Is the room filled with odours due to cooking or several people smoking together etc? → The odour will gradually fade as the unit operates. Have you moved the unit from another room? → The unit may emit the odour of the room in which it was used previously. Let the unit run a while longer. Is there anything in the room that is giving off an odour continuously? (Paint, new furniture, wallpaper, sprays, cosmetics, chemicals) → As continuously emitted odours cannot be completely eliminated, you should ventilate the room at the same time or run the unit in a well-ventilated room for a short while.
No air is being emitted	 Is the air outlet or an air inlet blocked? If they are not blocked, the fan motor is faulty. → Contact the place of purchase.

■ Other

■ Otner	
Phenomenon	Check points
The fan stops midway through unit operation	 Are the pre-filters and dust collection filter attached before the unit is operated? The fan is configured to stop in order to protect electrical components if a part is not properly attached. → If a part is not attached, unplug the unit and attach all parts before turning the unit on again.
The sound of Streamer discharge can no longer be heard	Streamer operation is dependent on time control. Page 12
There is interference on our TV screen	 Is the TV or radio positioned within 2m of the unit, or is an indoor antenna positioned near the unit? Are the power supply cord or antenna cable of the TV or radio routed near the unit? → Keep the unit as far as possible from the TV, radio, or antenna.
Just inserting the power plug causes operation to start	 Did you disconnect the power plug during a power failure, or when a sudden voltage fluctuation occurred, to move the unit or disconnect the power plug during the last operation? → The auto-restart function automatically resumes operation.

Specifications

Model name	MC30YBFVM3				
Power supply	1Ph, 220-240/220-230V, 50/60 Hz				
Operation mode		Air Purifying			
Operation mode	Turbo	Standard	Quiet		
Power consumption (W)	25	15	8		
Operating sound (dB)	37	27	19		
Airflow rate (m³/h)	180	120	60		
Coverage area (m²)	23 *		*1		
Unit dimensions (mm)	H450 x W270 x D270				
Weight (kg)	5.8				
Power supply cord length (m)	1.8				

[•] These specification values are applicable to both 50Hz 220–240V and 60Hz 220–230V.

^{*1.} Coverage area was calculated in accordance with JEM1467. (when FAN setting is "Turbo")

產品特色


閃流技術



「閃流放電」係一種電漿放電技術,可以在空氣清淨機裡產生具有強力氧化能力的高速電子,能迅速消除、分解臭味並持續恢復脫臭觸媒的吸附力。(高速電子僅在機器內產生並消失,所以十分安全。)

閃流放雷可分解吸附的臭味。

• 可循環分解並恢復吸附,維持脫臭能力。

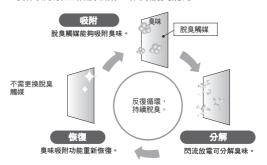

閃流運作與否視空氣雜質程度而定。

在運作過程中,閃流放電可能會產生「咻一」的響聲,但這並非機器的瑕疵。

此外,聲音可能會因操作環境而減弱或是改變,這種改變屬正常現象。

某些情況中,出風口可能會釋放輕微的臭味,是因為閃流放電會產生微量的臭氧。然而,您不必太 在意產生的微量臭氧,這並不會對人體造成傷害。

對應PM2.5

數據結果是在32立方公尺的密閉空間取得。 上述效果不代表在消費者環境下可獲得完全相同的效果。

消除99%的0.1-2.5μm的懸浮微粒 (註1)。

- 因通風等原因從室外飄入的懸浮微粒不在考慮範圍內。
- ₱ PM2.5 是懸浮微粒粒徑小於或等於 2.5 µm 的通稱。
- 尚未證實此空氣清淨機能夠消除粒徑小於 0.1 μm 的懸浮微粒。此產品無法消除所有空氣傳播的有毒物質。

(註1)測試方法:日本電機工業會標準(JEM1467)

測試基準:於 90 分鐘或更短時間內,在 32 立方公尺的密閉空間裡消除 99%的 0.1- $2.5 \,\mu$ m 縣浮微粉。

此數值是在 32 立方公尺的測試空間內所得。

強大氣流驅動的強力、快速吸入能力

使用強大氣流吸入家庭灰塵及臭味。

3層濾網結構確實捕捉髒汙,快速淨化周遭空氣。

可捕捉及分解的物質



塵蟎排泄物與 屍體等過敏物質



臭味



甲醛



柴油懸浮微粒



氮氢化物

可捕捉之物質



灰塵



黃沙

目次

開始前必讀		
	產品特色 安全須知 各部位名稱與功能 運轉前的準備	3 5
運轉	想要空氣清淨運轉時	
方便的機能	想要使用陰霾模式時	11
詳細設定	。 。 り流輸出設定	12
保養	。 保養 另售品 / 長期不使用時	
有問題時	指示燈出現以下狀況時	17

安全須知

謹請遵守說明的內容,以防止對人身造成危害或對財產造成損害。

■因錯誤操作以致發生的內容區分如下:

警告表示「有死亡或重傷之虞的內容」。

注意 表示「有受傷或財物損害之虞的內容」

♠ 警告 為防止火災、觸電或嚴重受傷,敬請遵守。

雷源插頭或雷源線



■運轉中勿拔除電源插頭。 (否則將因發熱而引發火災或觸電)

- ■切勿以濕手插拔電源插頭。 (否則將導致觸雷)
- ■超過插座或配線器具的額定使用方式 或交流 110 以外的電源, 請勿使用。 (當延長線等超過額定時,將因發熱而引 發火災)
- ■請勿拉扯電源線來拔下插頭。 (否則將因斷線而發熱或起火)
- ■切勿從事可能導致破損的行為。
- 損傷、加工、過度彎曲、拉扯、扭曲、 束紮、承載重物等。
- ●若電源線損壞時,必須由製造 廠商或其服務處或具有相關資 格的人員加以更換以避免危險。





- ■電源插頭需確實插到底。
- 損傷的電源插頭或鬆弛的插座請勿使用。 (若未完全插到底,將導致觸電、短路或 因發熱而發生火災)
- ■定期以乾布擦拭電源插頭上的灰塵。
- ●長期不使用時,請拔下電源插頭。 (否則灰塵積堆或濕氣等問題將造成絕緣 不良而發生火災)
- ■保養、檢查或移動時務必停止運轉, **並** 並 が 拔下 雷源 插頭。

(否則將導致觸電或受傷)

請勿在以下場所使用



- ●使用油或可燃氣體等的場所、 或有外漏之虞的場所。 (否則將因著火或吸入至本機內而起火 或冒煙,或因樹脂劣化或龜裂而受傷)
- ●有腐蝕性氣體或金屬塵埃的場所。 (否則將因著火或吸入至本機內而起火 或冒煙)
- 浴室等高溫、高濕或有水的場所。 (可能因漏電而發生火災或觸電)
- 嬰幼兒伸手可及處。 (否則將導致觸雷或受傷)


■切勿接近點燃的

使用時




■切勿使用含氯或酸性清潔劑。 (否則將產牛有毒氣體而損害健康, 或因樹脂劣化或龜裂而受傷)

香菸或線香等附近。 (否則將導致著火或吸入至 本機內而起火或冒煙)

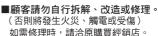

- ■回風口或出風口勿插入手指或異物。 (否則將導致觸電、受傷或故障等)
- ■切勿對出風口或本機潑水。 (否則將發生火災或觸電)
- ■可燃性物質(造型噴霧或殺蟲 劑等)

請勿在本機附近使用。 切勿以揮發油或去清油擦拭本機。 (否則將導致觸電、引火或龜裂)

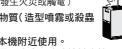

異常或故障時立即停止使用,並拔下電源插頭



異常或故障範例 按下開關後仍不運轉。

- ●一動到電源線就時而通電、時而不通電。
- 務必實施 運轉中發出異常音或振動。

 - ◆本機外殼變形或異常發熱。
 - 發出焦臭味。 (若在異常狀態下仍繼續運轉,將導致故障、觸電、冒煙或發生火災等)

CME

請洽原購買經銷店。

■謹請遵守的內容種類,以「圖案記號」區分說明。



代表「禁止從事的內容」。



代表「務必從事的內容」。

⚠ 注意 為防止漏電或受傷以及保障身家財產等,敬請遵守。

使用時



■本機不預期供生理、威知、心智能力、 經驗或知識不足之使用者(包含孩童) 使用,除非在對其負有安全責任人員 之監督或指導下安全使用。

下述人士使用時,亦請周遭的人多加注意。

- 嬰幼兒、孩童、年長者、患病者、身障者
- 渦量飲酒或服用安眠藥者 (否則可能將導致觸電或受傷、身體不適)
- ■孩童應受監護,以確保孩童不嬉玩本機。 (否則將導致觸電或受傷)
- ■化妝品等細微粉體請勿在本機附近使用。 (否則將導致觸電或故障)
- ■使用水煙式殺蟲劑時請勿運轉。
- 使用殺蟲劑之後,請充分涌風後再運轉。 (否則殘留的藥劑成分將自出風 口釋出進而危害健康)
- ■請勿在火災警報器的附近使用。
- 當吹出來的風吹到火災警報器 時,可能會使火災警報器反應延遲,甚至 不反應。



本產品的運轉並不能取代通風。

■與燃燒器具一同使用時, 請注意充分通風。

(否則將導致一氧化碳中毒) 本產品無法去除一氧化碳。



■在寵物附近使用時, 請注意避免使寵物在本機灑尿 或嚙咬電源線。

(否則將發生火災、觸電或受傷)

本機



■回風口或出風口切勿覆蓋衣物、 布塊或窗簾等。

(否則將使空氣循環變差或發熱、起火)

■切勿乘坐或倚靠在本機上。 (否則將因掉落或傾倒等而受傷)



移動時



■提起本產品移動時,基於安全, 操作上請充分注意。

● 務必握住本機的把手搬運。

搬運時,請勿抓取脫臭濾網模組把手處 提起本體。

(否則將因掉落而受傷)








各部位名稱與功能

⚠ 注意 -

搬運時,請勿抓取脫臭濾網模組把手處提起本體。(否則將因掉落而受傷)

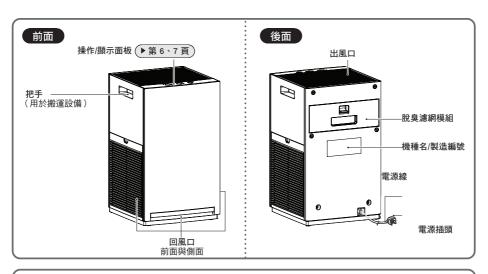

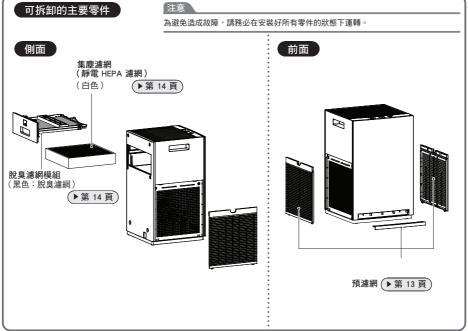

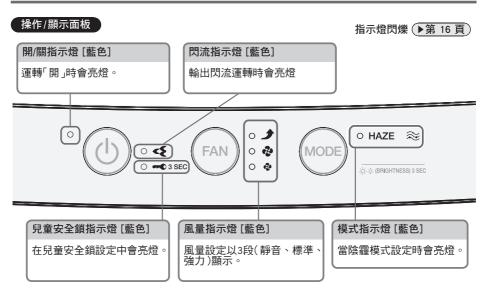


- 亮燈中操作將受限制,即使按到其他按鈕也只會響起嗶嗶嗶聲,防止孩童錯誤操作。
 ▶第 11 頁
- 當運轉閃流時,該指示燈亮起。閃流運轉取決於時間設定。
- · 在意閃流放電的「咻-」的響聲或臭氣的臭味時,請將閃流輸出設定為「低」。 (▶第 12 頁)

各部位名稱與功能

操作/ 顯示面板



按下以打開或關閉電源

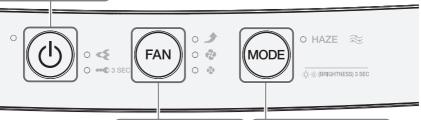

風量按鈕

按下以改變風量設定

模式按鈕

按下即啟用陰霾模式

附件



距離牆壁至少

30cm以上

風的流向

脫臭濾網模組......

操作前安裝到本機。 有關詳細信息,請參閱脫臭 濾網模組上貼的注意事項。

運轉前的準備

距離牆壁至少

距離牆壁至少一个

10cm以上

30cm以上



良好的設置方法

- · 請選擇室內整體涌風最佳的場所。
- 請設置在穩定的場所。若設置在不穩定的場所, 有時本機的振動會變大。
- · 在本機內部的電源迴路、電線影響下,電視影像 出現雜訊或收音機、音響發生雜音時,請將本機 與上述電器距離2 m以上。無線電話、電波時鐘 也一樣。

注意事項

- 為避免牆面髒汙,請參考圖的設置尺寸設置。但由於本機會吸入髒空氣,因此視牆面的種類而定有時即使已依照圖的設置尺寸,本機周圍的牆面仍可能變髒。如遇此狀況,使用時請與牆面保持充分的距離。
- 長時間在相同場所使用時,自本機下部所吸進的 空氣可能會使本機底下或周圍的地板或牆面變 髒。建議定期清掃。

運轉前的準備

請勿在以下場所使用

- 陽光直接照射的場所 (會導致變色)
- 暖房機器周圍等高溫處 (會因熱導致變色和變形)
- 醫院、工廠、實驗室、美容院、暗房等使用化學 藥品的場所


(揮發到空氣中的化學藥品或溶劑會使本機劣化、故障。)

- 電磁調理器或擴音器的附近等電磁較強的場所 否則可能會無法正常運作。
- 蠟燭或香氛蠟燭等會產生「煙灰」(導電性灰 塵)的場所

否則可能使濾網性能變差,無法捕集的灰塵易弄 髒房間。

■ 本機附近請勿使用具有矽靈成分的化妝品等※

- ※ 護髮品(分叉保養液、造型慕思、護髮霜等)、化妝品、止汗劑、防靜電劑、防水噴霧、增艷劑、玻璃清潔劑、化學抹布、髮繼等
- 若閃流組件的針附著矽靈等絕緣物質,會無法產 牛閃流。
- · 可能會因此阻塞集塵濾網而無法達到清淨效果。
- 本機附近請勿使用超音波加濕器等 否則可能因此阻塞集塵濾網而無法達到清淨效 果。

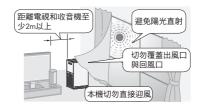

關於閃流放電及主動離子

會產生微量的臭氧,因此可能會從出風口聞到 味道,但因只有少量,並不會危害健康。

無法去除香菸中的有害物質(一氧化碳等)

2 安裝脫臭濾網模組

·安裝方法請參閱脫臭濾網模組上貼的注意事項。

3 將電源插頭插入插座

插入電源插頭以操作本機。





運轉中切勿拔除電源插頭停止運轉。(否則將因發熱而發生火災或觸電)



0 3 SEC



0 🥒 0 🚱

MODE

O HAZE 📚

-O-O- (BRIGHTNESS) 3 SEC

想要空氣清淨運轉時(想要運轉或停止時)

清淨房間裡的空氣。

按下(小)。

- · 開/關指示燈 [藍色] 亮起。
- ・再按一次就停止。



注意事項

運轉中請勿移動本機,或拆卸、安裝零件。否則會導致故障或誤動作。

通知

- · 購買時的初始設定為強力風量。
- 拔下電源插頭時,或者停止後再次運轉時,會以前次運轉內容進行運轉。
- ·剛插入電源插頭後,約2秒間無法運轉操作。

想要改變風量時

可選擇喜好的風量。

◆ : 靜音◆ : 標準◆ : 強力

圖示表示風量的強弱。

按下(小)。

· 隨著每次按下,切換風量指示燈(藍色)。



關於風量設定

● 器
設定為微風運轉,建議在就寢時等場合使用。 脫臭能力會因此降低,想要儘快去除房間臭味時,建議使用「標準」以上。

致力運算 以大風量快速去除空氣的髒汗。便於在打掃房間時使用。

方便的機能



想要使用陰霾模式時

根據您的需要選擇模式。

當本機在陰霾模式下運行時,會自動調節風量。

按下 (MODE)。

- ·每次按下將啟用或停用陰霾模式 [藍色]。
 - o HAZE ≈

模式	使用和功能		
陰霾模式	極速去除懸浮微粒(PM 2.5),分解有害物質。		
	① 風量將開始以強力風量運轉90分鐘,同時閃流放電。 ② 之後風量將切換為標準風量,同時閃流放電,直到功能被終止。		

通知

- ·按下 (FAN) 將終止陰霾模式。
- · 當陰霾模式已終止,它會切換回之前的風量設置。

方便的機能







O HAZE 📚

(C ⇒ (BRIGHTNESS) 3 SEC

想要使用兒童安全鎖時

可限制使用按鈕,防止兒童錯誤操作。

按下((l))約3秒鐘。

- 再次按下(山)約3秒即可取消。
- ·在兒童安全鎖設定中,操作將受到限制,即使按下其他按鈕也會出現「嗶嗶嗶」音,這是為了防 止兒童錯誤操作。

注意

- · 在兒童安全鎖設定中拔下電源插頭時,兒童安全鎖即取消。
- · 設定後,兒童安全鎖指示燈 [藍色] 會亮燈。

想改變指示燈的亮度時

可調節本機指示燈的亮度。

按下 (MODE) 約3秒。

・隨著每次按下 (MODE) 約3秒,本機指示燈亮度會依序切換。



通知

- 在臥室等在意亮度的場合中,可方便調整指示燈亮度。
- ・即使將開/關 指示燈設為「關」,燈也不會熄滅。亮度變成「暗」。
- ・在指示燈亮度設定為「關」時,每按一次(FAN)或 (MODE) 按鈕,指示燈會以「暗」的亮度顯示,約 10秒後燈號就會熄滅。

詳細設定



在意閃流放電「咻一」的響聲或臭氧的臭味時

*購買時的設定

閃流的輸出設定

通常*

低

在停止運轉狀態下,按下 (山) 和 (MODE) 約3秒。

每次按下 (小) 和 (MODE) 約 3 秒,即在通常和低之間切換。

當切換設定「低」時,「嗶」音響起, 閃流指示燈閃爍約5秒。

當切換設定「通常」時,「嗶」音響起, 閃流指示燈亮約5秒。

閃爍

● ≪ 亮燈

■閃流的運行狀態

風量設定	閃流輸出設定	通常	低				
風量	靜音	切換運轉**	停止				
	標準		切換運轉**				
	強力	運轉	運轉				

**閃流運轉與停止取決於時間設定

通知

- ·由於設定成「低」運轉時會降低脫臭能力,因此建議設定為「通常」來使用。
- · 已設定的內容在拔除電源插頭後仍會記憶。

保養

- ▲ 警告

保養前務必停止運轉,並拔下電源插頭。 (否則將導致觸電或受傷)

出風格柵

■ 清潔出風口(當有汙垢排出時)

用軟毛刷清潔出風口。

- * 小心不要讓灰塵落入空氣清淨機內。
- * 如果被灰塵覆蓋,請用柔軟的濕布 擦拭灰塵。
- · 切勿使用硬毛刷等用具(可能造成破壞)



本機

在意髒汙時(擦拭)

- · 使用沾濕的軟布擦拭髒汙。
- · 髒汙嚴重時,以沾有厨房專用中性洗潔精的布巾擦拭 髒汗。
- · 切勿使用硬毛刷等用具。(可能造成破壞)


預濾網(前面/左側/右側)

大約每2週一次

吸塵器





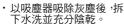

·格子間的清理需使用軟 毛刷。


注意事項

- 請勿使用棉棒或硬毛刷。 (否則將造成濾網破損)
- 請勿過度用力。 (否則將造成瀘網破損或損傷)
- 髒汙嚴重時,以溶入廚 房專用中性洗潔精的溫 水或水浸泡,確實沖洗 以避免洗潔精殘留,接 著充分陰乾。

拆除 抓住預濾網的凹處, 明自己方向拉並拆 「 ① 拇指按住本機,握著預濾網的中間。 ② 向自己方向拉動。





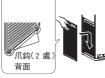


解爪鈎(1處) 插入本機。 按壓兩端確 實安裝。

爪鈎(1處)

俯視圖


警告:

至日下預濾網時,請使用 3 個手指 拉向自己的方向以防止預濾網損壞

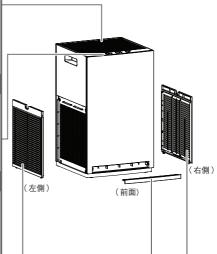

- 1 警告 -

- ·請勿使用汽油、揮發油、去漬油、拋光粉、煤油、酒精等。(否則將導致龜裂、觸電或起火)
- 本機請勿水洗。(否則將導致觸電、火災或故障)

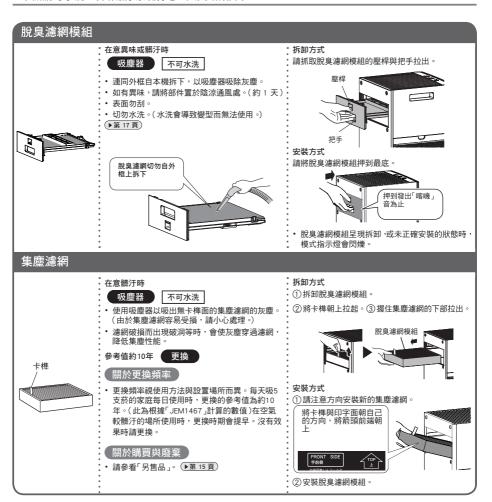

注意事項

- 請務必在已安裝集塵濾網、脫臭濾網模組的狀態下運轉。若未安裝就進行運轉,將導致故障。
- · 為防止變色和變形,敬請遵守。
 - 使用洗潔精時,請擦拭乾淨避免洗潔精殘留。
 - 使用熱水時,請控制在40℃以下。
 - 請勿在陽光直曬的場所乾燥。
 - 請勿以吹風機吹乾。
 - 請勿以火烤。
- · 使用吸塵器時,請避免撞擊。(否則將導致損傷)

另售品

請洽原購買經銷店購買。

更換用

集塵濾網(1個) 品號:BAFP500A



- · 更換參考值約10年。
- · 在各項零件髒汙的狀態下持續使用時
 - · 無法獲得空氣清淨效果。
 - · 無法獲得脫臭效果。
 - ・有時會產生臭味。
- · 集塵濾網(材質:聚酯/聚丙烯)請依照居住地區的垃圾分類辦法進行處分。

長期不使用時

- 1. 拔下電源插頭。
- 2. 進行保養。 ▶第 13、14 頁)
 - · 水洗過的零件,需特別徹底乾燥。(若有水氣殘留,易滋生黴菌)
- 為避免自出風口跑進灰塵,請蓋上塑膠袋,直立放置於乾燥的場所保管。 (若倒放或側放保管,將導致故障)

- / 警告 -


指示燈出現以下狀況時

保養前務必停止運轉,並拔下電源插頭。 (否則將導致觸電或受傷)



確認指示燈,依照以下內容因應處理。



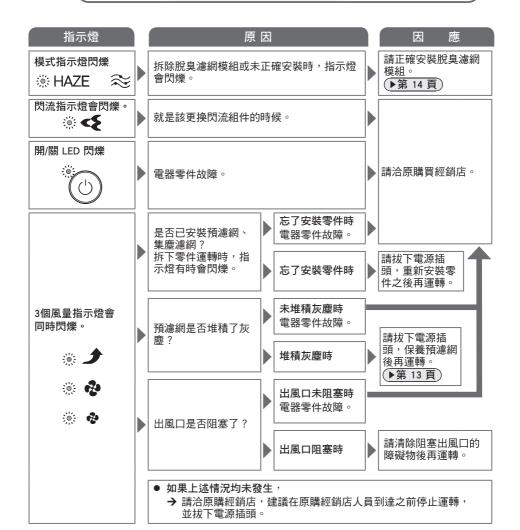

諮詢前請先確認。

常見問題

Q: 集塵濾網可以保養嗎?

A: 無法保養。請勿以吸塵器清理或水洗。

(否則將降低集塵濾網性能) 髒汙嚴重時,請加以更換。

(▶第 14 頁)



Q: 集塵濾網一下子就變黑了…

A: 雖然集塵性能不變,但若在意的話,請加以更換。



A: 不可以水洗。(水洗會導致變型而無法使用。)

若已經水洗過,請洽原購買經銷店。

請從本機上拆下脫臭濾網模組,使用吸塵器吸除灰塵。

不需要更换。

如有異味,請將部件置於陰涼通風處。(約1天)



(▶第 14 頁)

疑似故障時

委託修理或諮詢前,請先確認以下內容。 確認後仍有異常時,請洽原購買經銷店。

有以下情形時,

請進行確認。

按下(小) 無法運轉




● 為保護系統,設備可能會在電壓突然大幅波動後停止運行。 如果電壓恢復正常時,將自動恢復運行。


雷厭保護節圍: 198V-264V

張 磬

運轉中出現「咻-」的 韾響

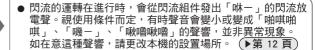

運轉中出現「齁-」、 「啪沙啪沙」的聲響

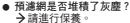

(▶第 13 頁)

集塵濾網的網眼有無阻塞?

→ 視使用狀況而定,有時會因為網眼阻塞而縮短濾網壽命。 請更換集塵濾網。(▶第 14 頁) ●第8頁

運轉聲渦大

集塵濾網是否已正確安裝?

→未正確安裝時,有時聲音會變大。

(▶第 14 頁)

指 示燈

指示燈不亮燈

運轉開始後,約10秒 指示燈即熄滅

● 指示燈亮度是否設成「關」?

→將指示燈設定為「關」時,除運轉開/關指示燈外的指 示燈都不會亮。

→指示燈亮度設定為「關」而開始運轉時, 約10秒以亮度「暗」顯示後, 亮度會變成「關」。

(▶第 11 頁)

▶第 13 頁

● 是否已安裝預濾網以及集塵濾網? 拆下零件運轉時,指示燈有時會閃爍。

【忘了安裝零件時】

→ 請拔下電源插頭,重新安裝零件之後再運轉。

【已安裝零件時】

電器零件故障。

→請洽原購買經銷店。

● 預濾網是否堆積了灰塵?

【堆積灰塵時】

→請拔下電源插頭,保養預濾網後再運轉。

【未堆積灰塵時】

電器零件故障。

→請洽原購買經銷店。

● 出風□是否阳寒了?

【出風口阻寒時】

→請清除阻塞出風口的障礙物後再運轉。

【出風口未阴寒時】

雷器零件故障。

→請洽原購買經銷店。

如果雷壓突然下降,指示燈可能會閃爍。

一旦電壓恢復正常,指示燈就會回到先前狀況。

電壓保護範圍: 198V-264V

→ 請洽原購買經銷店, 建議在原購買經銷店人員到達之前停 止運轉,並拔下電源插頭。









疑似故障時

■ 運轉中錯誤動作時

運轉中因打雷等因素,使本機顯示部異常亮燈或無法操作時,請先拔下電源插頭,待經過5秒以上之後,再次插入電源插頭進行運轉。

指示燈	閃流指示燈有時不亮 燈	>	● 閃流運轉取決於時間設定。閃流停止時,閃流指示燈會熄滅。	
	閃流指示燈閃爍		● 建議更換閃流組件。→ 請洽原購買經銷店。	
	模式指示燈閃爍	>	● 是否正確安裝脫臭濾網模組。 → 安裝脫臭濾網模組。	

空氣清淨機能	無法獲得清淨效果	● 是否設置於不通風的場所,或者周圍有障礙物?→ 請選擇房間內通風且無障礙物的場所。● 預濾網、集塵濾網是否髒汙?→ 請進行保養。▶第 13,14 頁
機能	出風口傳出臭味	 ・脫臭濾網是否有髒汙? →請進行保養。 ●由於閃流放電會產生微量臭氧,因此會自出風口傳出些微臭味,但因僅有微量,不會對健康產生影響。 ●是否因多人吸菸或烤肉等,使室內短時間內產生大量臭味? →運轉一段時間,臭味會逐漸消除。 ●是否將本機移動到其他房間? →有時會留有原本房間的臭味。請運轉一段時間。 ●房間裡有無常會產生臭味的物品? (塗裝、新家具、壁紙、噴霧類、化妝品、藥品) →經常持續產生的臭味將無法除盡,請一併使用房間的通風扇,或在通風良好的房間內運轉一段時間。
	無法出風	● 出風口或回風口是否阻塞了?如未阻塞,則可能是風扇馬達故障。→請洽原購買經銷店。

疑似故障時

其他	運轉中風扇停止	•	● 是否在預濾網、集塵濾網卸除的狀態下運轉?忘了安裝零件時,基於保護電器零件,有時風扇會停止。→ 忘了安裝時,請拔下電源插頭,正確安裝零件後再行運轉。		
	聽不見閃流放電的聲響	•	● 閃流運轉取決於時間設定。		
	電視的畫面有雜訊	•	● 是否在本機的2m內設置電視、收音機,或是在本機的附近使用室內天線?● 本機的附近是否有電視機、收音機的電源線、天線的配線?→ 請將本機儘可能遠離電視、收音機與天線。		
	插入電源插頭即開始運 作	•	● 是否在電源故障或發生突然的電壓波動時,或是為了移動本機拔出電源插頭,或在上次運作期間拔出電源插頭。→ 自動重新啟動功能會自動恢復運作		

規格

機種名	MC30YBFVM3				
電源	單相 220-240/220-230V, 50/60 Hz				
運轉模式	空氣淨化				
连带误以	強力	標準	靜音		
耗電量 (W)	25 15 8				
運轉音(dB)	37 27 19				
風量 (m³/h)	180 120 60				
適用地板面積 (m²)	23				
本機尺寸 (mm)	450(高)×270(寬)×270(深)				
重量 (kg)	5.8				
電源線長度 (m)	1.8				

[・]這些規格值同時適用於50Hz 220 - 240V 和 60Hz 220 - 230V

※1. 適用地板面積的數值是基於JEM1467的數值。(風量「強力」時)

- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.
- All images are for illustration purposes only.

Lot 60334, Persiaran Bukit Rahman Putra 3, Taman Perindustrian Bukit Rahman Putra, 47000 Sungai Buloh, Selangor Darul Ehsan, Malaysia.